

EN

The fabric may not feed when thick seams are being sewn and the presser foot is not level. (Fig. A)

In this case, use the presser foot locking pin (black button on the left side of zigzag foot "J") so that the presser foot remains level while sewing, allowing the fabric to be fed smoothly.

- ① Sewing direction
- ② Misalignment


■ If thick seams are being sewn and the fabric does not feed at the beginning of stitching

- ① Raise the presser foot lever.
- ② Align the beginning of stitching, and then position the fabric.
- ③ While holding zigzag foot "J" level, hold the presser foot locking pin (black button on the left side) pressed in, and lower the presser foot lever. (Fig. B)
- ④ Presser foot locking pin (black button)
- ④ Release the presser foot locking pin (black button).
  - The presser foot remains level, allowing the fabric to be fed. (Fig. C)
  - After the seam is sewn, the presser foot will return to its original angle.




XG4698-101

A

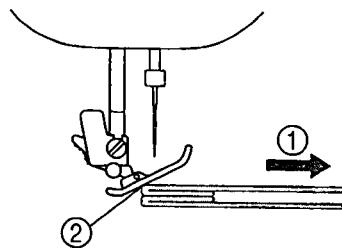

B

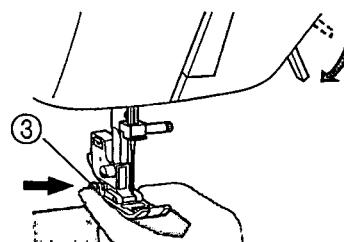

C

